

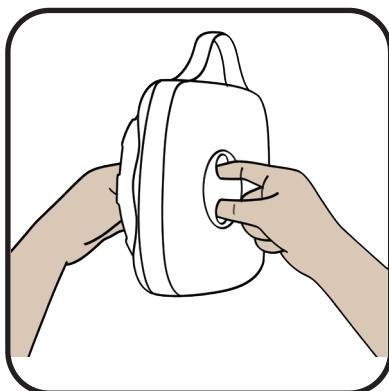


EVER UNCHARTED


INSTRUCTIONS FOR USE

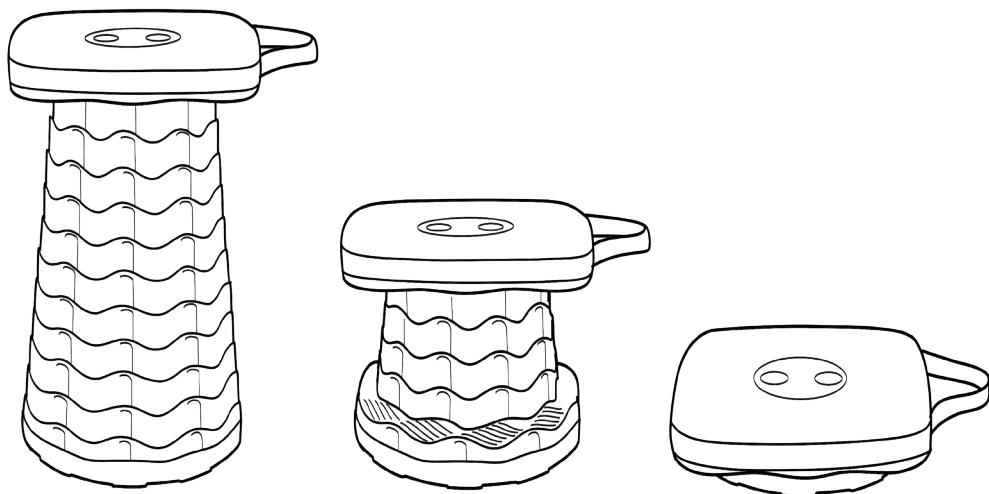

HOLD THE CENTER HOLES
ON BOTH SIDES

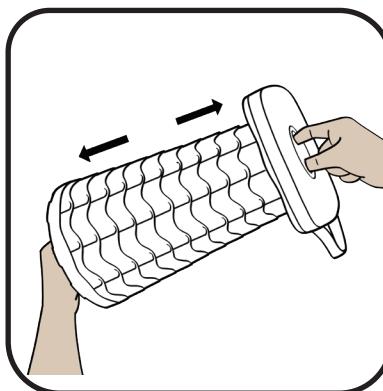


TO ADJUST THE HEIGHT, STRETCH
THE SEAT TO DESIRED HEIGHT

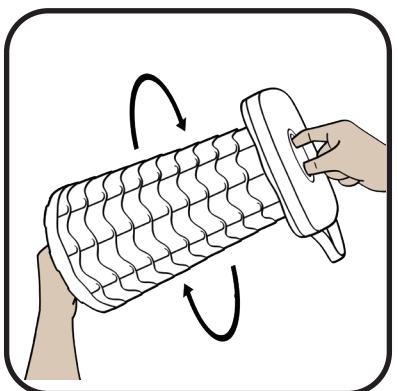


TO LOCK THE SEAT AT DESIRED HEIGHT
SLIGHTLY TURN UNTIL YOU HEAR A CLICK



THE NOMAD SEAT IS READY FOR USE

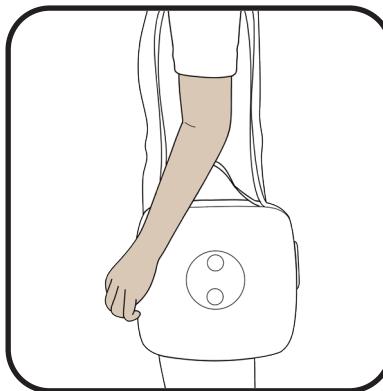

TO CARRY NOMAD SEAT OVER THE SHOULDER
LOOSEN THE SIDE STRAP & ADJUST LENGTH

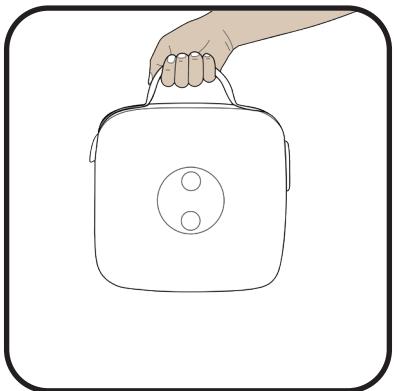

BY DEFAULT THE NOMAD SEAT CAN
BE CARRIED BY HAND